


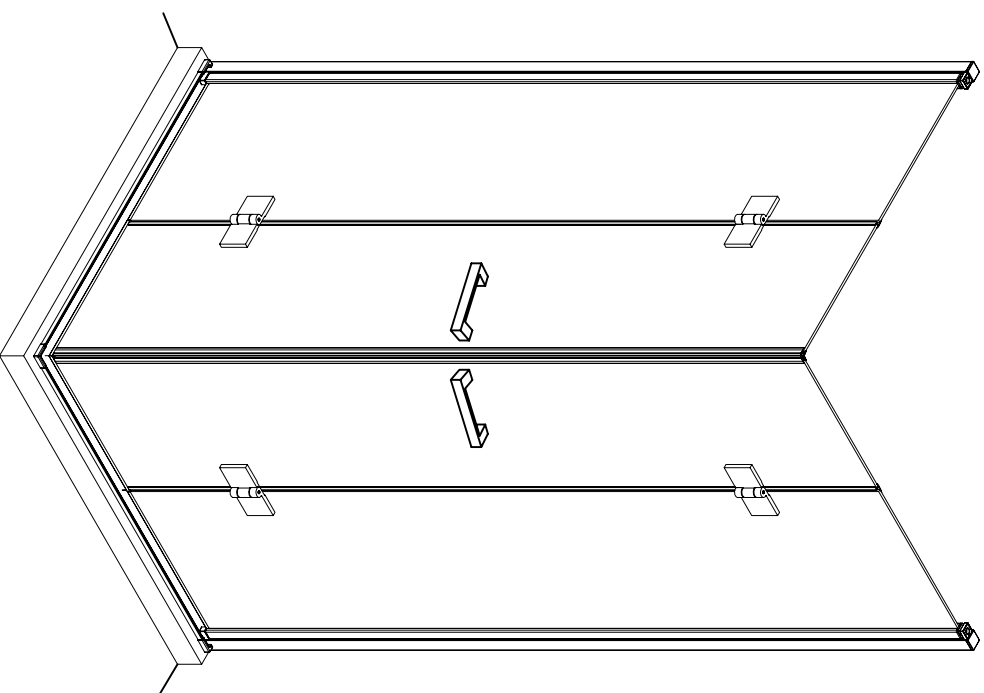
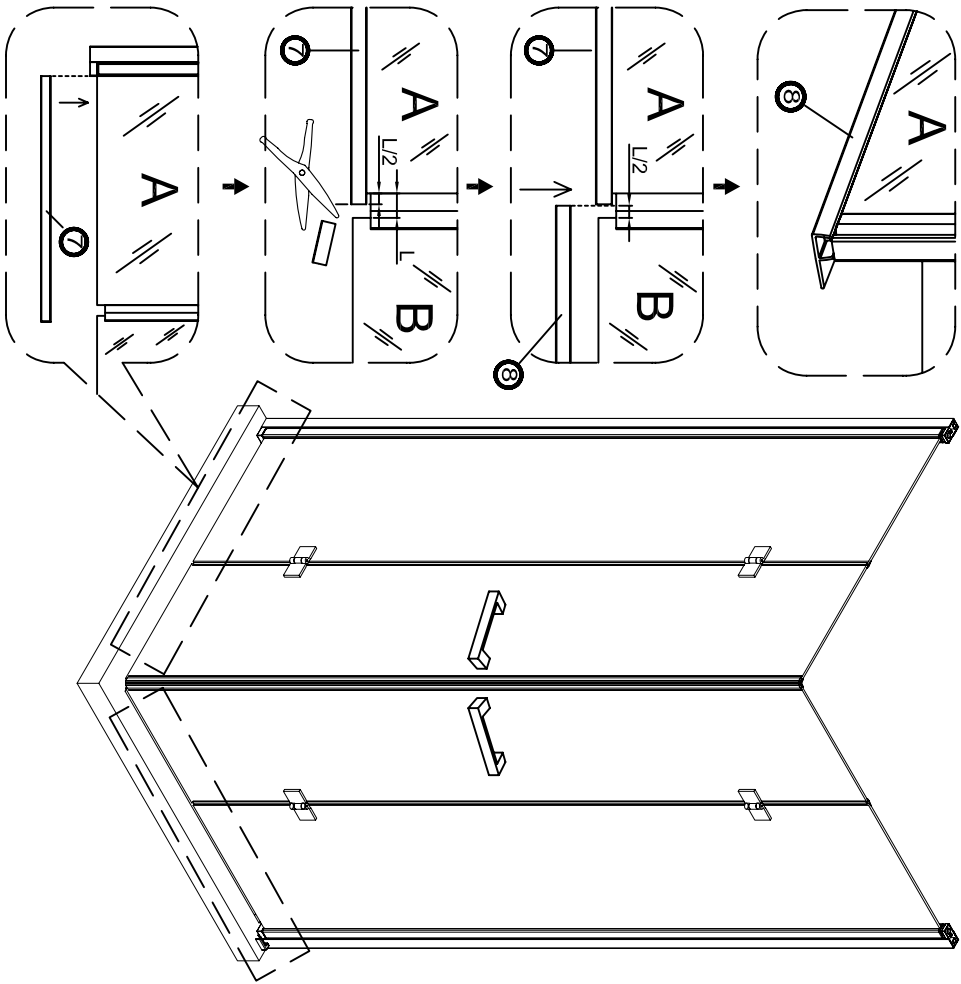


LZ231

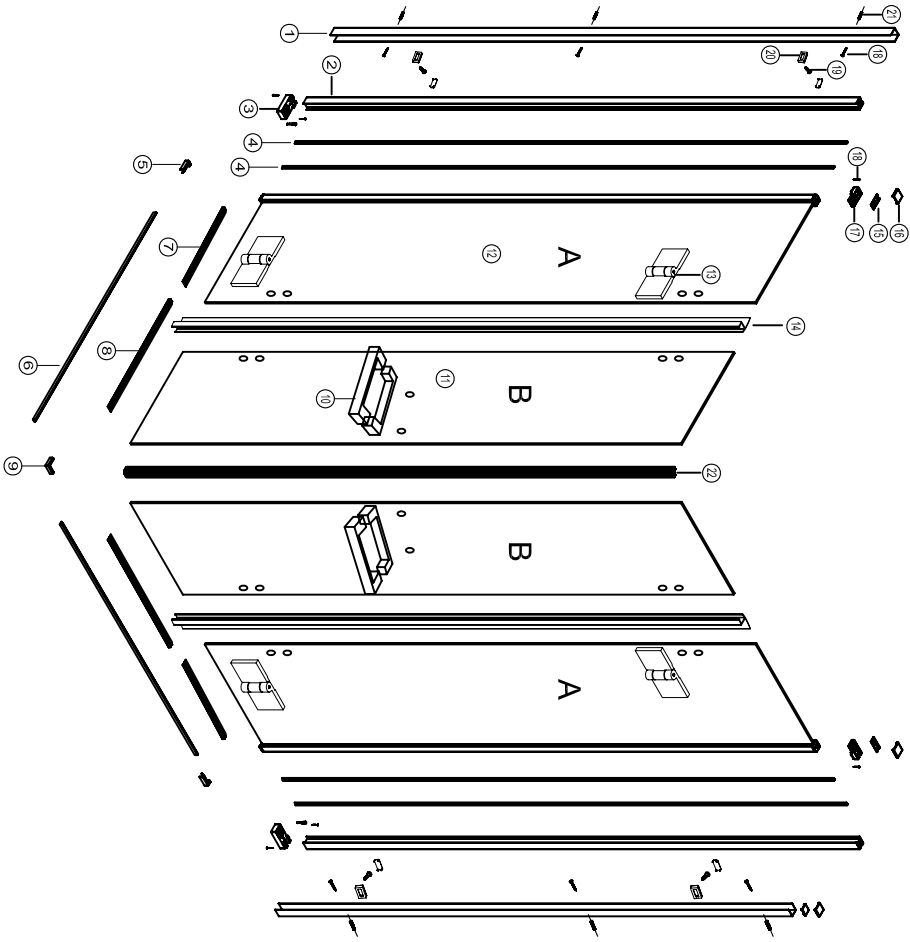

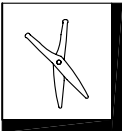


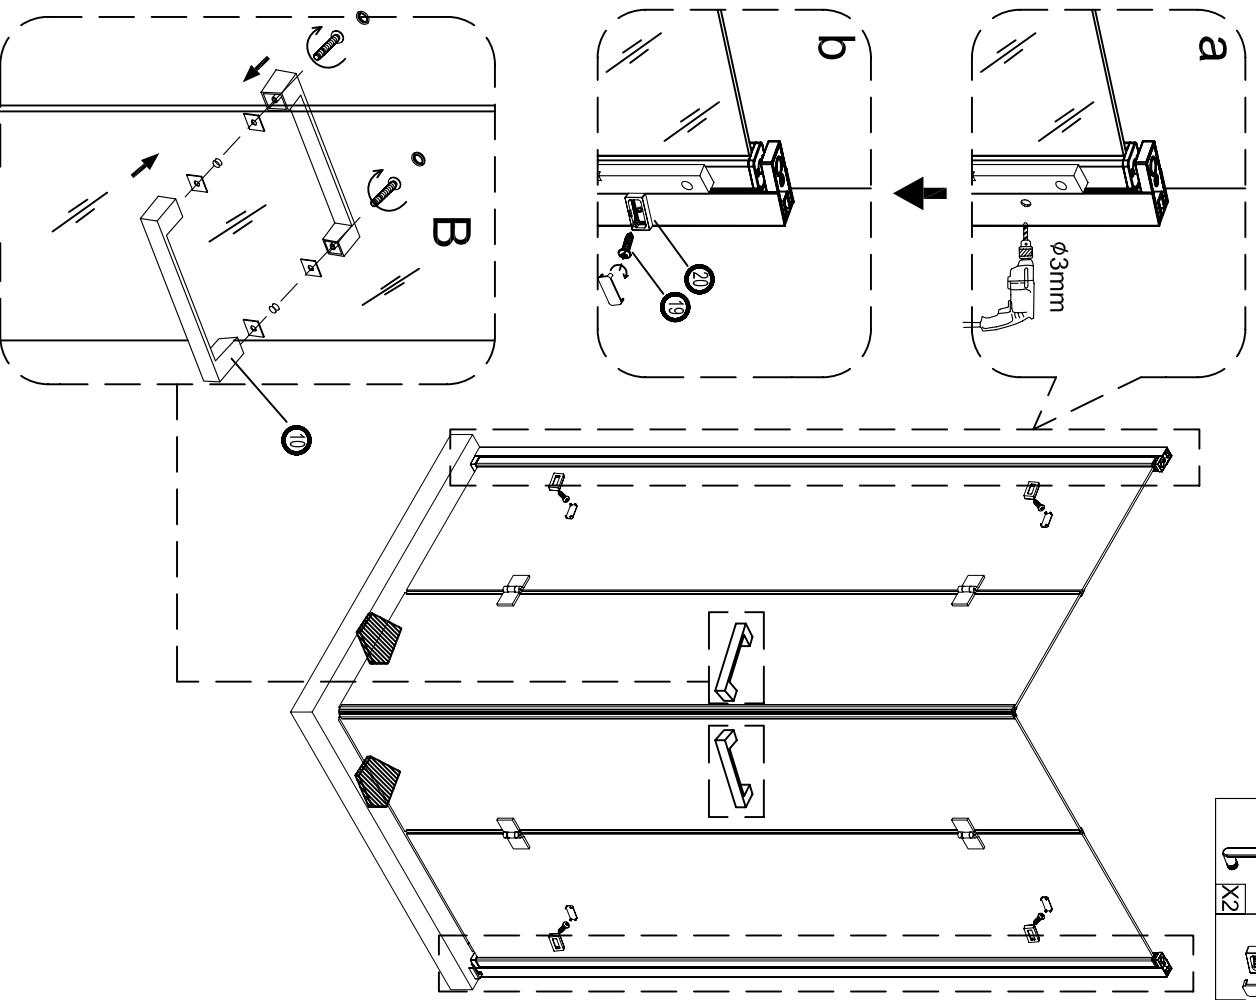


	X4
	X4
	X2
	X2






	AL052	X2			ST4X30	X12
	AL061	X2			ST4X8	X4
	HD030	X2			PL063	X4
	JT015	X4			PL041	X8
	PL075L/R	X1			JT002-02	X2
	AL016	X2				
	JT005-01	X2				
	JT005-01	X2				
	PL011	X2				
	HD024	X2				
	B	X2				
	A	X2				
	HD041	X4				
	JT005-06	X2				
	PL062	X2				
	PL066	X2				
	HD031	X2				

1

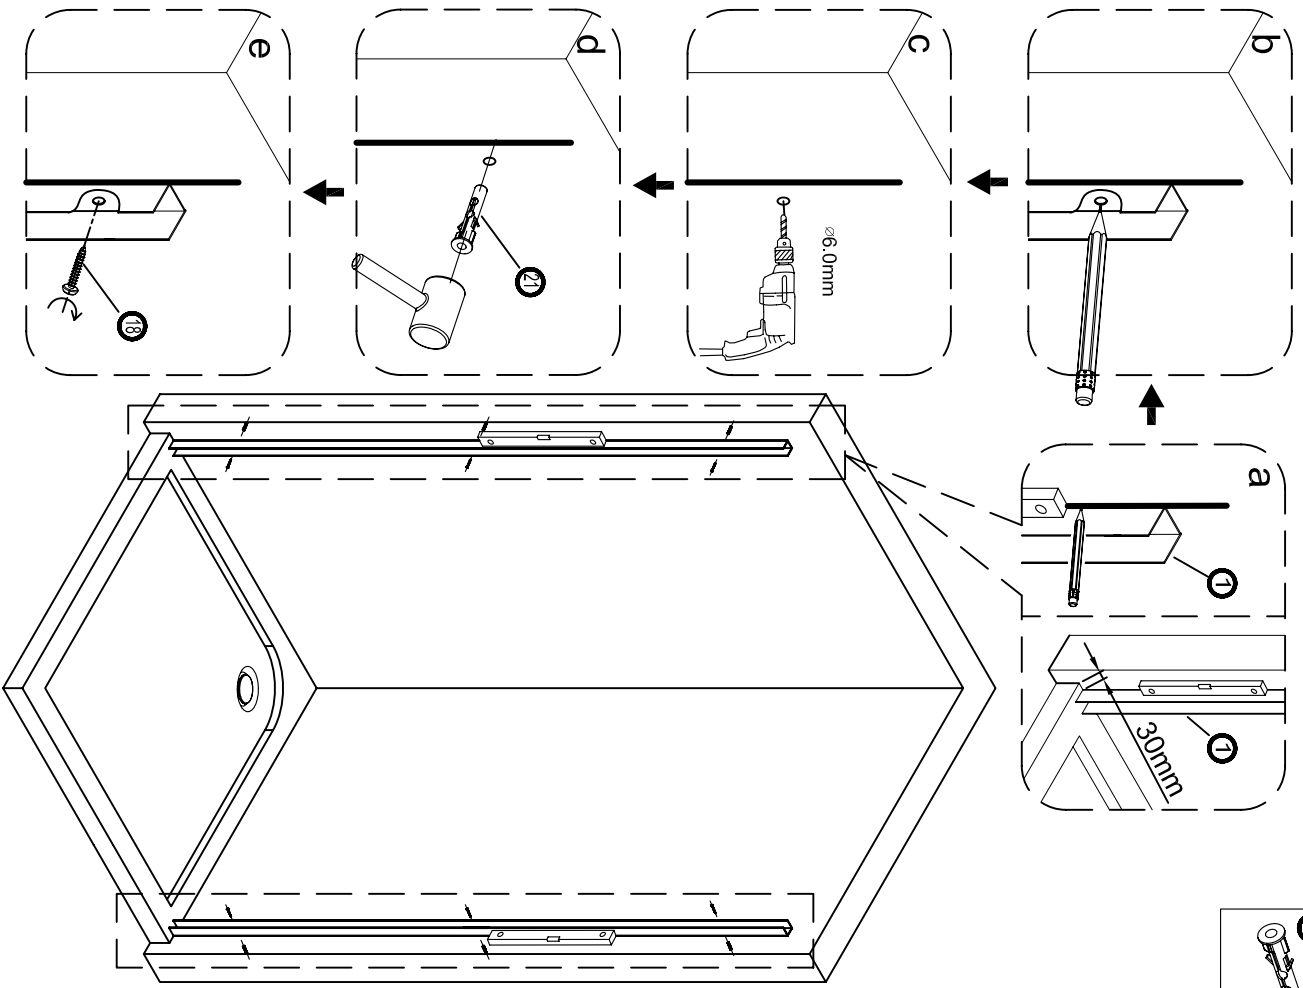



6

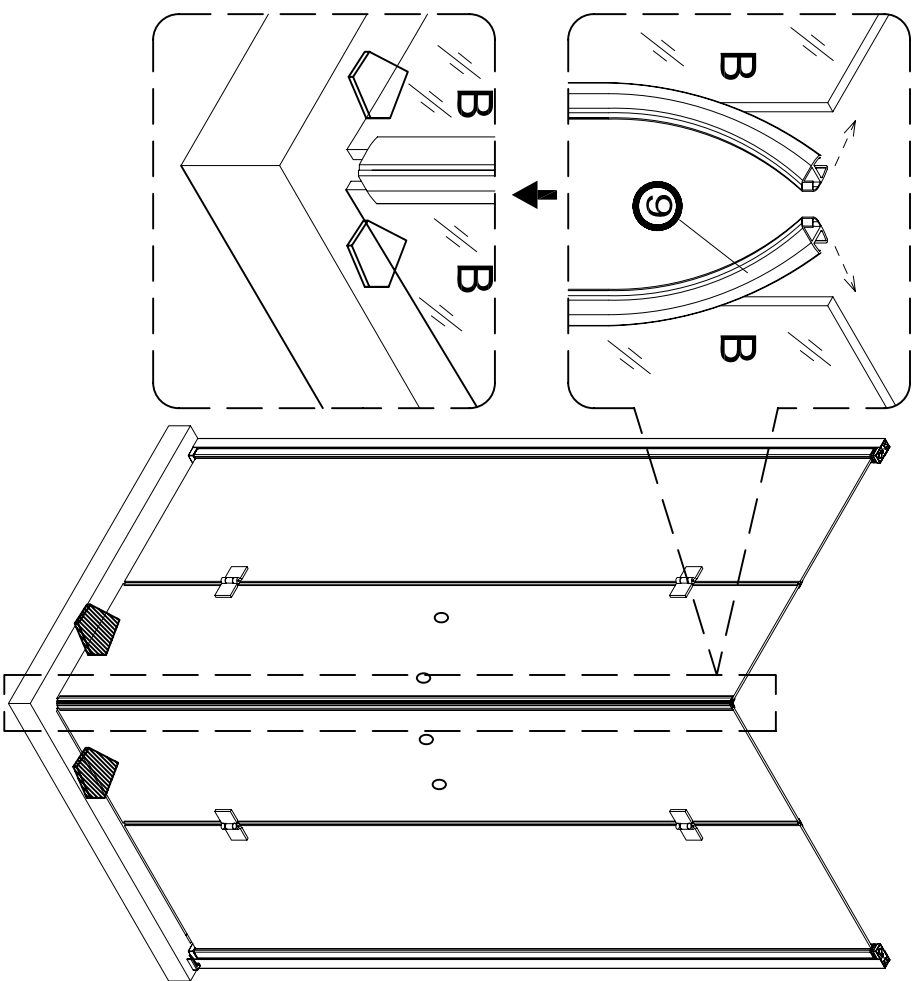

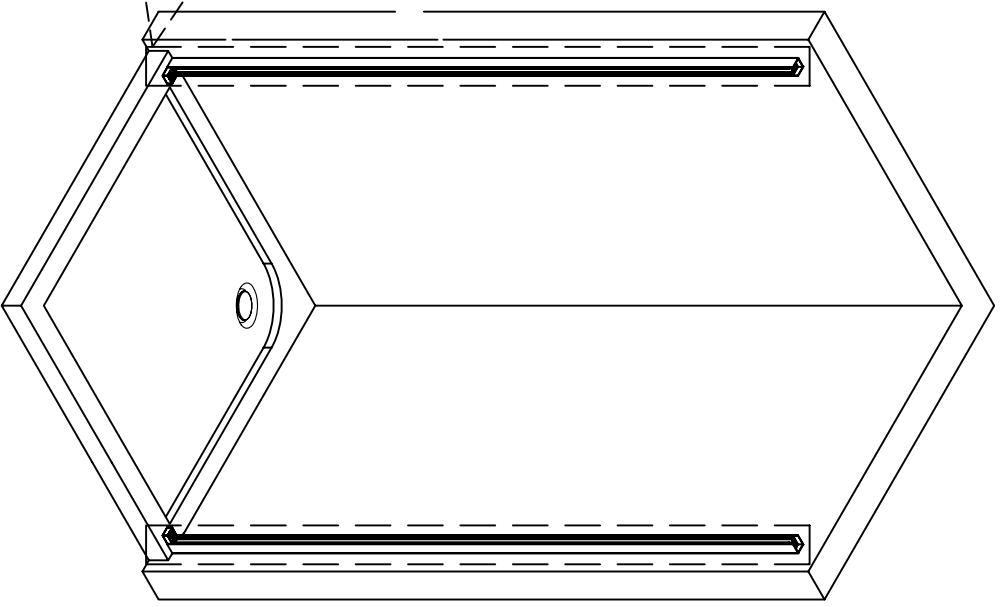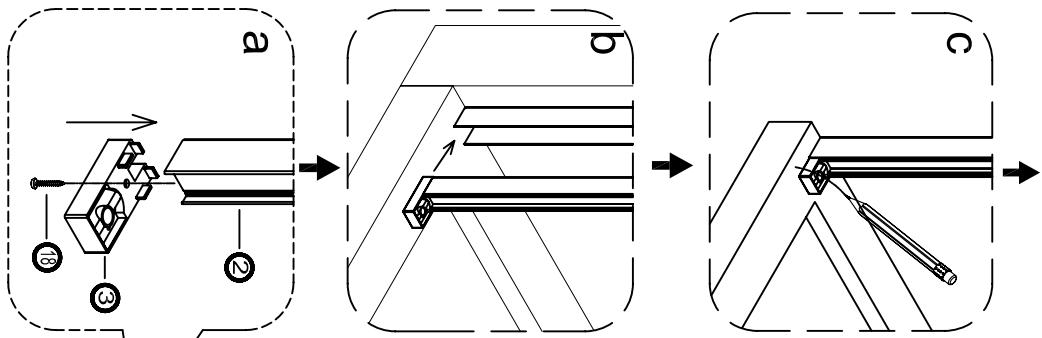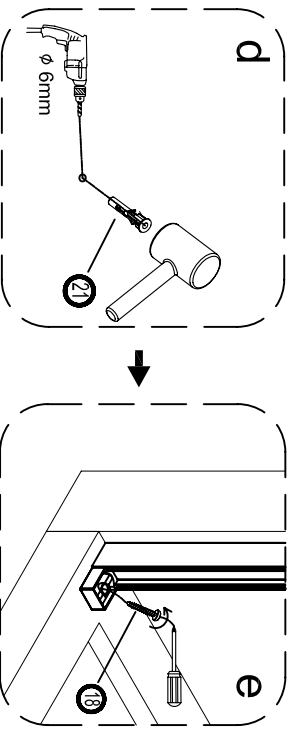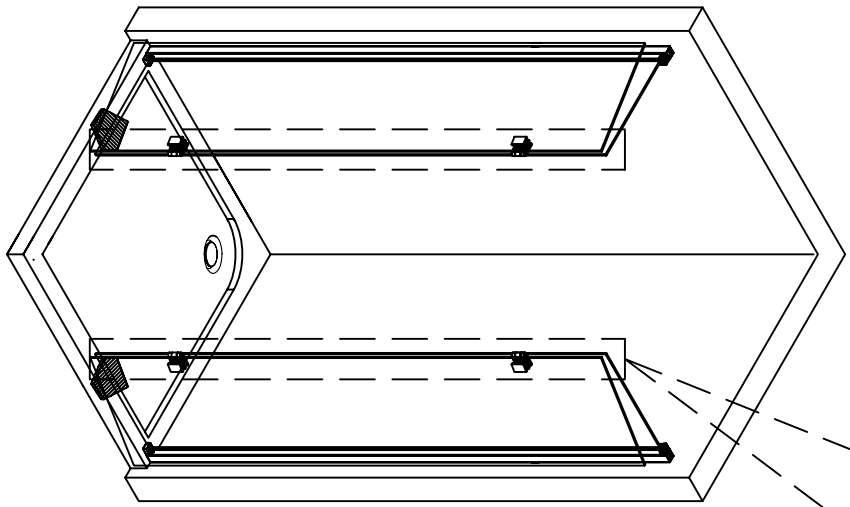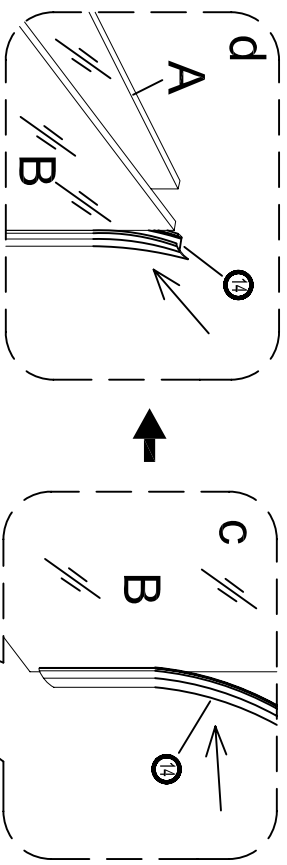

- ⊕ 1 6mm drill bit
- ⊕ 2 Hammer
- ⊕ 3 Screws
- ⊕ 4 Screws
- ⊕ 5 Screws
- ⊕ 6 Screws
- ⊕ 7 Screws
- ⊕ 8 Screws
- ⊕ 9 Screws
- ⊕ 10 Screws
- ⊕ 11 Screws
- ⊕ 12 Screws
- ⊕ 13 Screws
- ⊕ 14 Screws
- ⊕ 15 Screws
- ⊕ 16 Screws
- ⊕ 17 Screws
- ⊕ 18 Screws
- ⊕ 19 Screws
- ⊕ 20 Screws
- ⊕ 21 Screws

3

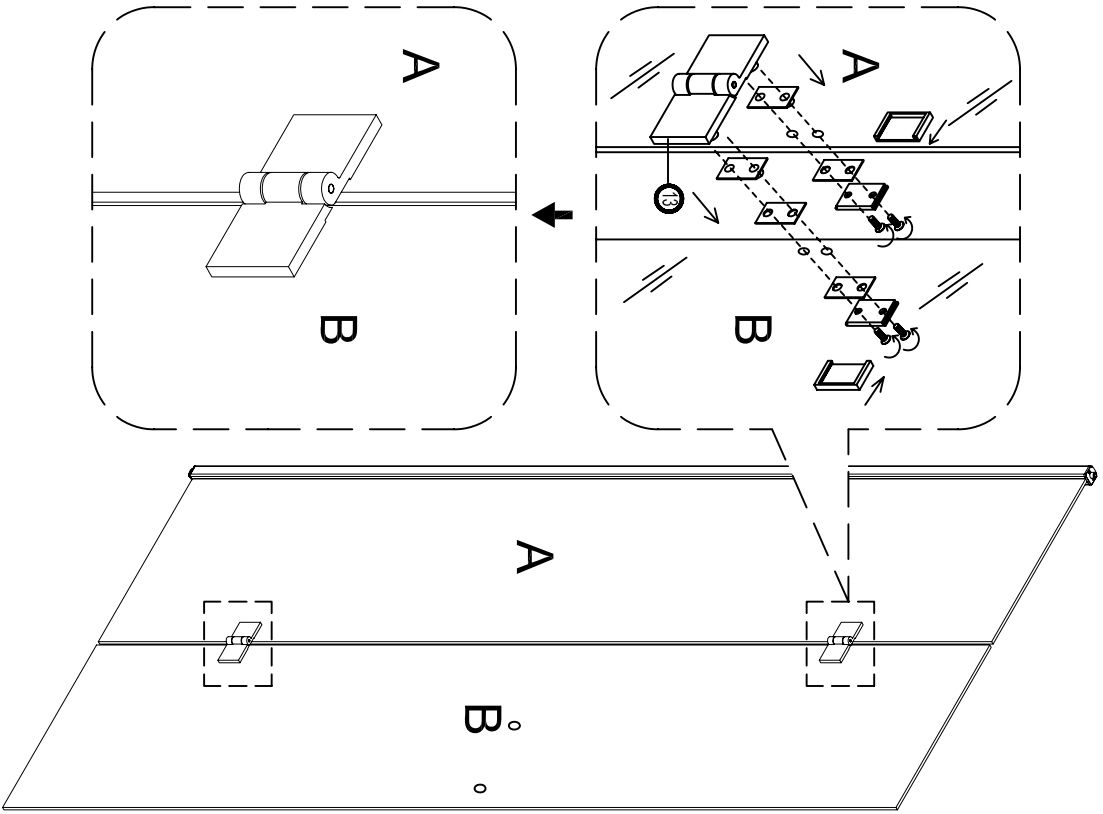

4

